

# VISIONTRACK

THE NEXT GENERATION OF TELEMATICS  
AND INTEGRATED CAMERA SOLUTIONS

# VT1000

How to replace the SD card



THE UK'S MOST AWARD-WINNING CAMERA TELEMATICS COMPANY



[www.visiontrack.com](http://www.visiontrack.com)

The purpose of this guide is to show you how to replace the SD card within the VT1000.

**Please make sure the VT1000 is powered off and showing no LED's before you remove the SD card. (If you do not follow this process, the camera could be disabled).**

You will need the following:

- Replacement SD Card
- Key



Insert the key into the lock barrel and turn clock wise.



With a firm grip slide the locking case away from the VT1000.



Push the SD card in to click release it.



Pull the SD card out of the VT1000 and put this aside.



Push the new SD card into the **VT1000** until you hear a click, this means the SD card is in securely, it will also sit flush within the casing.



Once the SD card is back in the **VT1000**, please place the locking case back over the **VT1000**.



You can now take the key and lock the case, moving the key anti clock wise.



You can now apply power to your camera.

**PLEASE NOTE - THE NEW SD CARD MAY HAVE FIRMWARE TO APPLY TO THE VT1000. YOU WILL NOTICE THIS WHEN YOU POWER THE VT1000 THE LEDS WILL FLASH ON AND OFF FOR A FEW MINUTES.**

**PLEASE DO NOT POWER DOWN THE VT1000 DURING THIS PROCESS AS YOU MAY DAMAGE THE CAMERA.**

**NORMAL OPERATION FOR THE VT1000 LEDS IS SOLID/FLASHING BLUE LED FOR RECORDING.**