

SD CARD SUPPORT VT1000 64GB SD

STEPS

- Check Current version of PC viewer and VT1000 Firmware
- Download the latest PC viewer 1.0.8.0 from (LINK) <u>Support.visiontrack.com</u>
- Download the latest VT1000 firmware 1.1.4 (LINK) <u>Support.visiontrack.com</u>
- Install PC viewer
- Copy firmware to SD card
- Insert SD card into VT1000 (Firmware upgrade)
- Leave recording for a few minutes then check SD card back in PC viewer to confirm firmware has applied
- Initialise SD card, check and change settings and put back into VT1000

- Check current firmware and PC viewer version •
- Remove SD card from VT1000
- Insert into PC and open PC viewer software
- Click on

	Select SD Card Drive or Backup folder
	D:\
	> 📑 Videos
	> Fictures
	> 🏪 Local Disk (C:)
Select the SD card	> 👷 FHDRM (D:)

- Select the

 This will show you the current PC viewer and Firmware installed on the VT1000
 About

	VT1000	
	PC Viewer Version : 1.0.8.0	
•	Recorder Version : 1.1.3	
	Copyright (C) 2015 TeleMGA Ltd. All rights reserved.	
	ОК	

2

- If required, download the latest PC viewer 1.0.8.0 from (LINK) support.visiontrack.com
- Remove the old version from your PC and install the latest version.

3

- If required download the latest VT1000 firmware 1.1.4 (LINK) support.visiontrack.com
- Download the zip file and unzip the folder, move the folder (program) to the root of the VT1000 SD card.

4

- Firmware upgrade
 (DO NOT TURN THE POWER OFF DURING THE UPGRADE AS THIS WILL CASUE THE UNIT TO FAIL)
- Put the SD card into the VT1000.
 The VT1000 will flash red and blue at the same time for a few seconds and then reboot.
- Once complete the VT1000 will show the blue LED, press the panic button and leave the unit recording for a few minutes.
- Turn off the VT1000 and put the SD card back into the PC viewer.

Follow step 1 to check the firmware has applied
 About

	VT1000
0	PC Viewer Version : 1.0.8.0
	Recorder Version : 1.1.4
	Copyright (C) 2015 TeleMGA Ltd. All rights reserved.
	ОК

5

- Initialise SD, check and change settings
- Click on
- Click on Init SD Card

Init SD Card

• Select 'Quick Format' and remove the tick from 'Backup Configuration File' and click start

Ini	it SD					
	Disk Drives : D					
	File System : FAT32					
	Quick Format					
	Backup Configuration File					
	Start Cancel	Close				

- Once initialised
- Change any settings you need to, <u>PLEASE MAKE SURE THE TICK IS REMOVED</u>
 FROM SD CARD AUTO FORMAT FEATURE

Click on 'OK'

Settings

Record Mode	Continuous	✓ Simple Setting Mo	de	
Resolution	720p (1280 X 720)	 Sensitivity 	5	
Frame Rate	30 FPS	/		
Password (1000~9999)		i rigger x value	5	
Max Papic Eile Number (10~	50) 10	Trigger Y Value	5	
	Decord Audio	Trigger Z Value	5	
		Auto adjust G-Ser	Auto adjust G-Sensor to Vehicle speed	
Parking Mode	Event Beep			
ystem		Date / Time		
Gps Record Time	About 7 days V Manual Time Setting		ng	
SD Error Beep	OFF	31/10/2019	09:01:24	
Alarm Out1	5 Sec	/		
Alarm Out2				
SD Card Auto Format Fea	ature			
Vehicle ID				
Init SD Card	Initialize Data		OK Cancel	
	Settings	×		
	-			
	Save Current Set	tings?		
	ОК	Cancel		

• You can now remove the SD card and place this back into the VT1000.



