



USER GUIDE



VT2000 3G ENABLED VEHICLE RECORDER

- Thank you for purchasing the VT2000 Vehicle Recorder.
- Please ensure that you read and understand this USER GUIDE and use it before connecting and installing this Recorder.
- Please store the USER GUIDE in an easily accessible location.

VER 1.0.0 1st Edition

INDEX

SAFETY ADVICE	3
GPS RECEPTION	4
CONTENTS	5
INTRODUCTION	6
FUNCTIONS	8
LEDS &BUZZER SPECIFICATION	10
Installation	11
CONFIGURATION TOOL USER GUIDE	12
INITIALIZE SD CARD	14
DEVICE SETTINGS	15
RECORD SETTINGS	16
EVENT SETTINGS	17
INFO. SETTINGS	18
CONNECTIVITY SETTINGS	19
SERVER SETTINGS	20
SOFTWARE USER GUIDE	21
PC VIEWER SOFTWARE SETTINGS	23
OPEN THE SD CARD	24
OPEN FILES	25
PLAYBACK	26
DRIVE DATA	27
TRACKING MAP	28
EVENT SEARCH	29
PRIVACY SETTINGS	30
SAVE JPEG AND AVI FILE	31
PRINT IMAGE	32
BACKING UP FILES	33
BACKUP DATA LIST AND EXPORT	34
SPECIFICATION	35
APPENDIX RECORDING TIME TABLE	36
APPENDIX UPGRADE	37
TECHNICAL SUPPORT AND WARRANTY	38

SAFETY ADVICE



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER.
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

Please make sure you follow the safety advice/instructions given in the user guide.

Caution

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**
Battery for RTC(Real Time Clock) inside

Caution

Install the product where it does not block driver's visibility and where there is no airbag installed. This could cause an accident or might injure passengers in case of accident

Caution

Damages due to production malfunction, loss of data, or other damages occurring while using this product shall not be the responsibility of the manufacturer. Although the product is a device used for recording videos, the product may not save all videos in the case of a malfunction. In the case of an accident, the sensor may not recognize the shock when the impact is light and as a result it may not begin recording automatically.

WARNING:

**TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE
THIS APPLIANCE TO RAIN OR MOISTURE.**

GPS RECEPTION

1. Activate the product in an area without large buildings to improve GPS reception.

The commercial purpose GPS has the average range error of more than 15 meters and the range error could be more than 100 meters due to environmental conditions like buildings, roadside trees etc.

2. The temperature range for optimum operation of the GPS receiver in your car is -10 ~ 50°C.

3. When using the product for the first time or after a long period (more than three days), it may take a little longer to recognize your current location.

It may take between five and thirty minutes to get GPS reception.

GPS reception may be impaired under the following circumstances

- 1) If there is an object at the end of the GPS antenna
- 2) If your vehicle has metallic elements on the windshields
- 3) If equipment generating electromagnetic waves that interfere with the GPS signal is installed in the vehicle e.g.: Other GPS devices such as a certain type of wireless activated alarms, MP3 and CD players and camera alarms using GPS.
- 4) If you are using a receiver connected by cable, electric interference can be avoided by simply changing the location of the receiver (antenna).
- 5) On heavily overcast or cloudy days, if the vehicle is in a covered location such as under a bridge or raised roadway, in a tunnel, an underground roadway or parking area, inside a building or surrounded by high-rise buildings.
- 6) If GPS signal reception is poor, it may take longer to locate your current position when the vehicle is moving than when it is stationary.


CONTENTS



**VT2000
Vehicle Recorder**




Power Cable

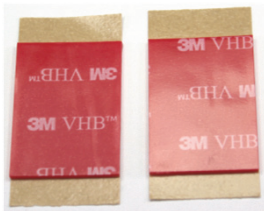


**Sticker for Windscreen mounting
(double sided tape x2)**



User Guide

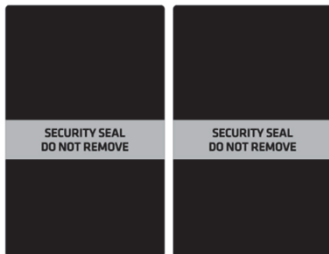

**Sticker for Angle Lock
(Void sticker x2)**

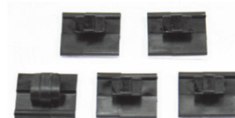

Wire Splice clips (x5)




Torx screw (x1)




SD Cover (x1)

INTRODUCTION

FRONT

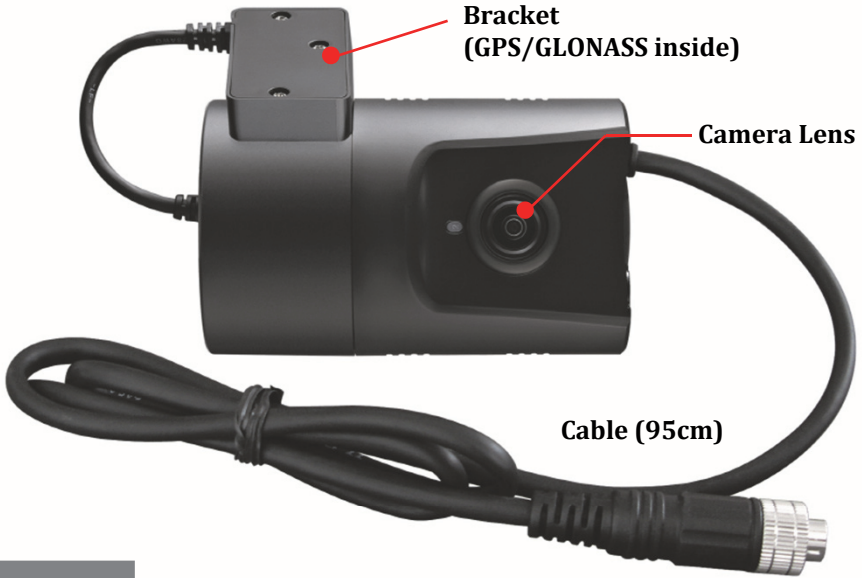


SIDE

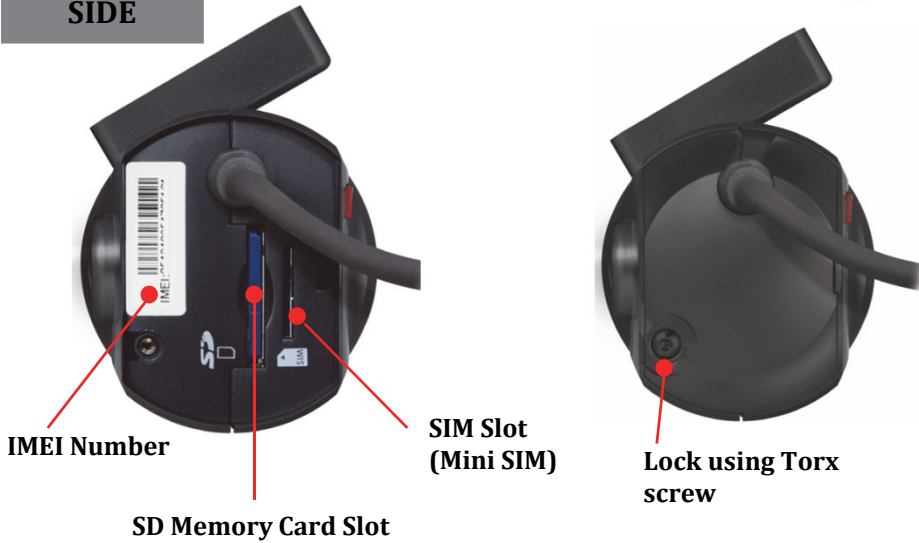





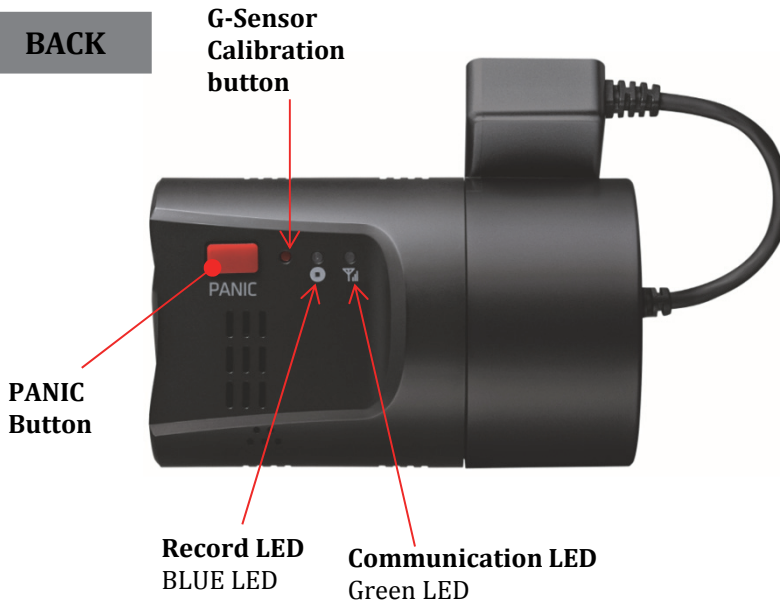


INTRODUCTION

BACK



POWER CABLE

-  Black (Ground)
-  Red (Power Battery +)
-  White (Power ACC +)
-  Green (Alarm In, NC/NO), (External panic button+)
-  Black (Ground), (External panic button+)
-  Orange (Alarm In, Voltage)
-  Yellow (Alarm out), Low(0V) to High (5V) 2seconds

**External Panic Button
(optional Item)**

**Cable length: 2m90cm
Button Case Size: 18 x39x10 mm**



FUNCTIONS

Automatic Booting

Once the VT2000 has been wired to your car power source the VT2000 will be boot up, this will take around 1 minute for the unit to be ready to record.

The default setting for record is the continuous recording at 30fps, 720P resolution. On this setting the SD card storage may be used up quicker and depending on the settings, overwrite or stop recording when full. To avoid losing valuable data, back up data to a separate storage or PC device after any incidents.

NOTE: The unit will not start recording immediately after power on. It takes around 1 minute for the built-in power backup system to charge. Thereafter, the internal flash memory will be ready to record.

Continuous Record (When Record mode set as “Continuous”)

This is the default mode for recording. In this setting the unit will begin recording after boot up and record the entire time the unit is powered.

The resolution and frame rates can be set as per your requirements. You can change the configuration of the recording using the VT2000 Software. To do this, please see the ‘Settings’ section on page 16.

Event Record (When Record mode set as “Event”)

The unit will record when triggered by either an impact or a push of the ‘PANIC’ button. Each event file contains up to 20 seconds prior & up to 20 seconds post event. And the event file can be extended by 2nd trigger during event record.

When events are triggered continuously, for every event, 20 seconds post-recording from the time of the event will be added to the event data file with a maximum recording time of 3 minutes. When this 3 minutes is reached, the file will be split and a new file will be created but the data will be continuous.

Dual Record (Continuous & Event Record)

The continuous record fps is 1fps and the file will be stored on the “Normal” folder. Event record will work according to the Fps setting for example 30frames per second recording and the file will be stored on the “Event” folder

Drive Data (DRV file)

The DRV (Drive Data) file will be recorded during driving even if there are no events or video. The DRV file consists of GPS and G-sensor data and it helps to find specific data or driving behaviors. The DRV file overwrites the oldest data. The DVR files will be made every 10 minutes.

FUNCTIONS

G-Sensor Calibration

G-Sensor Calibration is needed after installing the VT2000.

1. Install the unit and park the vehicle on a flat surface .
2. Turn on the unit and press the small red button three seconds.
3. Then calibration will be done with “beep” sound.

Built-in power backup (Super Capacitor)

When power to the unit is interrupted, VT2000 creates the last file using the internal Super Capacitor.

Time and Date

There are no time and date settings as the VT2000 get's this information from the GPS satellite's.

SD Memory Card Format

Please format [initialize] the SD card using the “Configuration Tool VT2000” software.



Safely Removal SD Card

Power off vehicle and take out SD memory card

Turn off the power and then check the BLUE LED light. Once the LED light is not on, you can now safely remove the SD memory card.

LEDS & BUZZER SPECIFICATION

BLUE LED (RECORD)
GREEN LED (COMMUNICATION)
FRONT LED
Buzzer

Status/Step			LED			Buzzer	
			Record	Communication	Front LED		
			Blue	Green			
							
Start-up	Booting step1		On	Off	On		
	Booting step2		On and Off		Off		
	Booting Finished		On		Off	「beep」(1time)	
Power off	Power off		Simultaneous Flashing (Blink rate: fast)		Off		
Record	Continuous Record	Recording	Flashing (Blink rate: Slow)		Off		
	Event Record	Stand by	Flashing (Blink rate: Very Slow)		Off		
		recording		Flashing (Blink rate: fast)		Off	
	Dual Record	Continuous Recording		Flashing (Blink rate: Slow)		Off	
		Event recording		Flashing (Blink rate: fast)		Off	
Communication	3G Network Device Ready			On			
	Communication			Flashing (Blink rate: fast)			
Function	SD Format		Simultaneous Flashing (Blink rate: normal)		Off	(Beep, 1time) and then repeat	
	G-Sensor Calibration					「Beep→(3seconds later) Be, BeBeep」	
	FW Upgrade		On and Off	Off and On	Off		
Warning	SD Card	SD Card Full	Flashing (Blink rate: Slow) 3times, and off 3seond. And then repeat		Off	「BeepBeepBeepBeep」 (3times)	
		without setting file	Simultaneous Flashing (Blink rate: Normal) 4seconds and then repeat it every minute.				
Error	Record Error	No SD, SD error, SD Lock, Write fail, No folder	Simultaneous Flashing (Blink rate: Slow)			「BeepBeepBeepBeep」 (3times)	
	Communication Error	3G Network Device error		Off		「BeepBeep」 (3times)	
		Data Network connection error			Off		
		DMS communication error			Flashing (Blink rate: Slow)		
Event Trigger	G-Sensor, Rec Button, Alarm-In					「DingDong, DingDong」 (1time)	
	Over Speed					「Be, Beep, Be, Beep」 (1time)	

INSTALLATION

Park your vehicle on a flat level surface.
Turn off the engine before installing the VT2000.

Attach the VT2000 using the provided double sided 3M tape.
The surface must be clean and dry before you install. We recommended to install the product behind the rear view mirror on the front windshield.

NOTE: The 3M adhesive tape will not stick well with dust or oil, etc.
Please make sure the surface is clean before applying.

Adjust camera view. Make sure the lens has an unobstructed view. Check from outside the vehicle to check the camera angle, you can adjust the angle via the bracket teeth.

Arrange the power cord neatly alongside of the windshield and door pillar trim.

The VT2000 requires a continuous 12/24volt power source from the vehicle.

The cable supplied will allow you to hard wire the VT2000 unit to the fuse box of your vehicle.

Connect the “red cable (+)” to a fuse (see picture below). It should be connected to a fuse that has power when you start the engine.



The ground cable should be contacted at the car body or battery negative.

Start on the car after installation.

CONFIGURATION TOOL USER GUIDE

Configuration Tool VT2000 Software



PC SYSTEM REQUIREMENT

Recommended PC specifications for PC Viewer Software


OS	Windows Vista, Windows 7, Windows 8/8.1
CPU	Core 2 Duo 2.5GHz or Higher
RAM	2GB or Higher
Interface	SD Memory Card Reader
HDD Free space	Install : 55MB or Higher Backup : 4GB or Higher
Display	1024 x 768 pixel/True Color or higher

If the PC does not meet the minimum system requirement, the PC Viewer Software may not function properly.

SOFTWARE INSTALLATION

The Configuration Tool VT2000 Software is on the provided SD card. (Also available on our website.)

1. Connect the SD card into your PC (if your computer does not have and SD card slot use the USB SD card reader) and open the “My Computer”
2. Right-click the “FHDRM” drive and select [Open]
3. Double click [configtool(FW1.0.0_PC1.0.0.0_V1).EXE] in the [pcsw] folder.
4. Select the language and then follow the dialog box prompts.

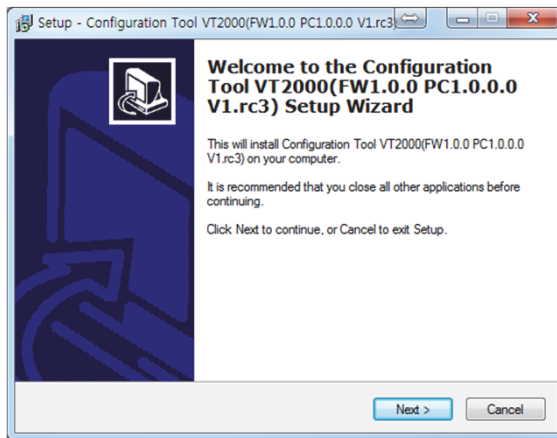

5. The “Configuration Tool VT2000” icon will be displayed on your desktop.




NOTE: To Un-install the Configuration Tool VT2000 Software
Make sure the program is not running and open the 'Control Panel'
Select 'Remove Program' and remove the Configuration Tool VT2000 Software.

INITIALIZE SD CARD




Click!


To initialize the SD card quickly, click on the above icon and you will be presented with the following screen to choose the SD card to initialize. Click 'OK' when selected.

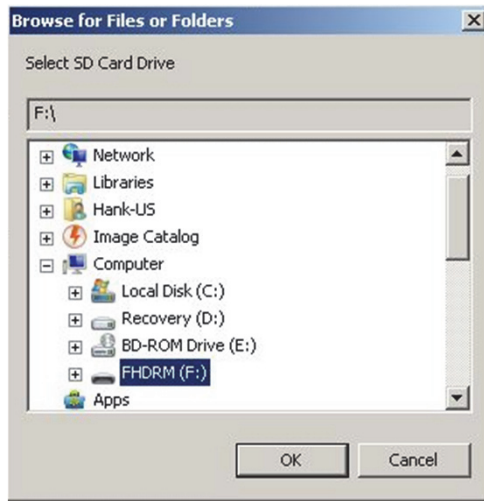

On the following screen, check the 'Quick Format' button and uncheck the 'Backup Configuration File' and Click 'Start' to begin initialization.

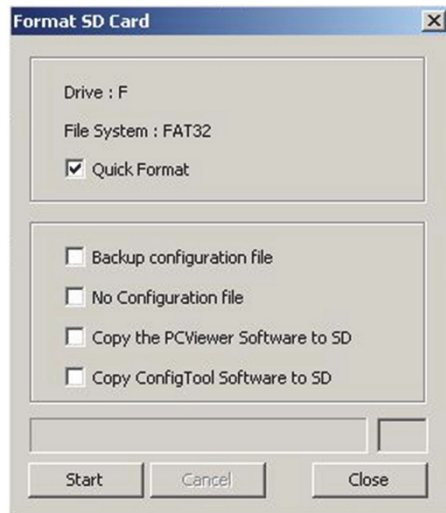

DEVICE SETTINGS

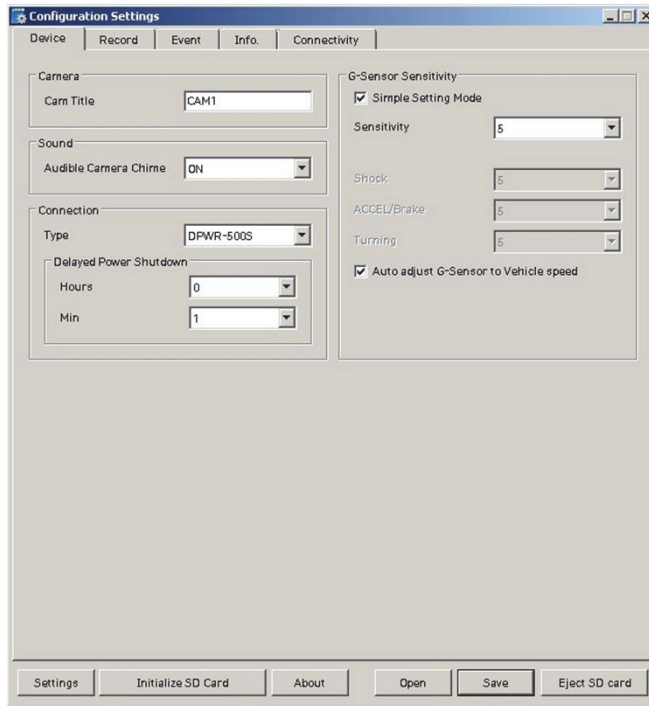

Cam Title

Use the alphabet and numbers to rename (max 10 digits) the cameras. The new names will be displayed on the live screen and all recordings.

Audible Camera Chime: Turn the Chime on or off

Connection Type : Set the power supply type

Delayed Power Shutdown: Set delayed power shutdown time.


G-Sensor Sensitivity: The shock sensor sensitivity can be set to 'Simple setting Mode' or 'Custom'. Set to easy allows you to set the sensitivity to 9 (High), 5 (Medium) or 1 (Low).

In custom set, you can set 3 different shock sensor values individually.

Auto adjust G-Sensor to Vehicle speed

Once it checked, VT2000 will automatically decrease the G-Sensor sensitivity at higher vehicle speeds to compensate for the naturally added G-forces that are experienced due to velocity.

RECORD SETTINGS

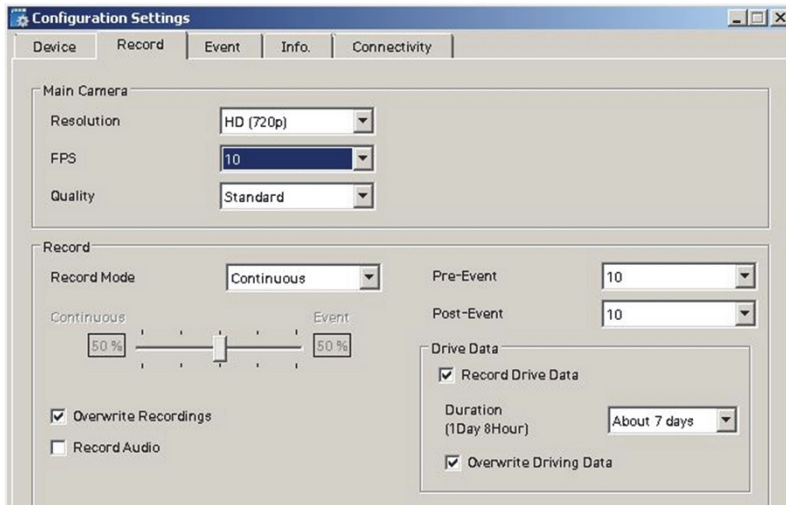

Resolution

VGA (640x480), 720P (1280x720), 1080p HD (1920x1080).

Frame Rate

Adjust the frame rate from 30fps, 15fps, 10fps, 5~1fps

Quality

Adjust the picture quality from Standard, High, Super

Record Mode

Event (Automatically starts recording by G-sensor or Panic button.)

Continuous (Always recording when powered by DC 12/24V.)

Dual (The continuous record fps is 1fps and Event record will work according to the Fps setting.)

Overwrite Recordings

This function allows the unit to overwrite old files on the SD Card automatically. You can overwrite the continuous, panic or G-Sensor recorded files.

Pre-Event / Post-Event

Adjust the Pre/Post Event time from 5 seconds to 20seconds

Drive Data

GPS data & G-Sensor data will be recorded with videos and at the same time, GPS data & G-Sensor data will be recorded separately, we call it as 'Drive data(drv file)'.

Adjust Drive Data duration from "about 1 day" to "about 30 days".

EVENT SETTINGS

The screenshot shows the 'Configuration Settings' window with the 'Event' tab selected. The window is divided into several sections for configuring different event types:

- Event Triggered by:**
 - G-Sensor:** Record (checked), Beep (checked), Alarm Out: N/A
 - Panic Button:** Record (checked), Beep (checked), Alarm Out: N/A
 - Overspeed 1:** Record (checked), Beep (checked), Speed Limit: 100 km/h Over, Time of detect: (empty), Alarm Out: N/A
 - Overspeed 2:** Record (checked), Beep (checked), Speed Limit: 120 km/h Over, Time of detect: 1 Min, Alarm Out: N/A
 - Alarm Input 1:** Enable (checked), Record (unchecked), Beep (checked), Title: Alarm1, Type: V-Off, Alarm Out: N/A
 - Alarm Input 2:** Enable (checked), Record (unchecked), Beep (checked), Title: Alarm2, Type: N-O, Alarm Out: N/A
- Alarm Out:** Title: AlarmOut1

At the bottom of the window, there are buttons for 'Settings', 'Initialize SD Card', 'About', 'Open', 'Save', and 'Eject SD card'.

Event settings

You can set the unit to record when triggered by the G-Sensor, Panic Button and GPS Speed Limit and Alarm Inputs.


And you can set the Alarm out duration per each event.

INFO. SETTINGS

The screenshot shows a software window titled "Configuration Settings" with four tabs: "Device", "Record", "Event", and "Info." (which is selected). The "Connectivity" tab is also visible. The "Date / Time" section contains a "Daylight Saving Time" checkbox (unchecked), a "Retrieve time settings from my PC" button, and fields for "Start" and "End" times. The "Start" and "End" fields are each composed of four dropdown menus: "Month" (set to 1), "Week No." (set to 1), "Day of Week" (set to Sunday), and "Hour" (set to 0). Below these are "Time Zone (UTC)" (set to 0 : 00) and "GPS Time Sync" (set to "At Start Up"). A "Manual Time Setting" checkbox is also present and unchecked, with a date field (11/12/2015) and a time field (4:41:41 PM). The "System" section has a "Speed Format" dropdown menu set to "km/h". The "ID" section has two empty text input fields for "Vehicle ID" and "Driver ID".

This option allows you to adjust the Time Zone, GPS Time synchronization, set your Vehicle ID and also the Driver ID.

CONNECTIVITY SETTINGS

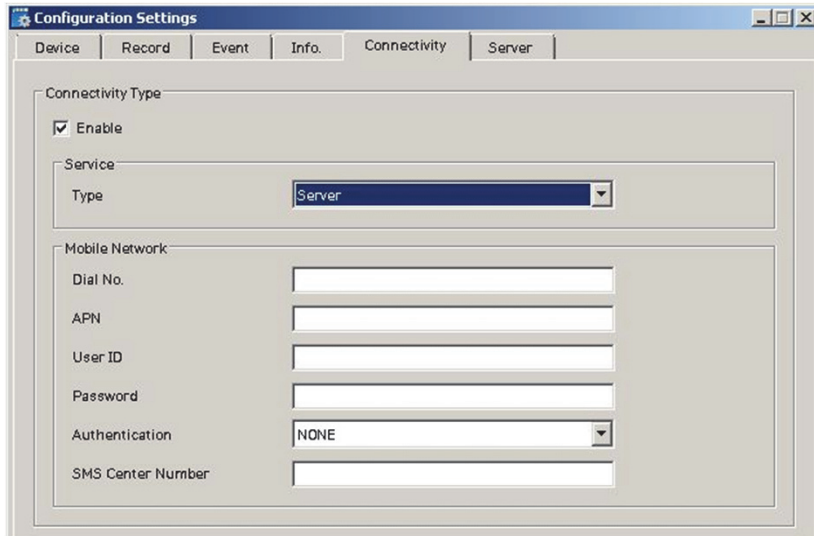

The screenshot shows a 'Configuration Settings' dialog box with a 'Connectivity' tab selected. The 'Connectivity Type' section has the 'Enable' checkbox checked. The 'Service' section has a 'Type' dropdown menu set to 'Server'. The 'Mobile Network' section contains several input fields: 'Dial No.', 'APN', 'User ID', 'Password', 'Authentication' (set to 'NONE'), and 'SMS Center Number'.

Set the Service Type as Sever to use 3G connection.

Adjust the settings like Dial No., APN, password, User ID, Authentication etc.

Please refer to the Sim Card supplier website for these settings.

SERVER SETTINGS

Configuration Settings

Device | Record | Event | Info | Connectivity | Server

DMS4

Domain/Static IP and Port # ex) http://DomainName:5000

License Key

Transmit Live Tracking Data

Transmit Event Data

Event Images

Main Camera

Pre-Event

Post-Event

Event Triggered by

Panic Button Alarm1

G-Sensor Alarm2

Over Speed1

Over Speed2

Set Domain/Static IP and Port number

Default License Key is "DASKEY_001"

And check Transmit Live Tracking Data and Transmit Event Data.

And then select events.

SOFTWARE USER GUIDE

PC Viewer Software



PC SYSTEM REQUIREMENT

Recommended PC specifications for PC Viewer Software


OS	Windows Vista, Windows 7, Windows 8/8.1
CPU	Core 2 Duo 2.5GHz or Higher
RAM	2GB or Higher
Interface	SD Memory Card Reader
HDD Free space	Install : 55MB or Higher Backup : 4GB or Higher
Display	1024 x 768 pixel/True Color or higher

If the PC does not meet the minimum system requirement, the PC Viewer Software may not function properly.


SOFTWARE INSTALLATION

The PC Viewer Software is on the provided SD card. (Also available on our website.)

1. Connect the SD card into your PC (if your computer does not have an SD card slot use the USB SD card reader) and open the “My Computer”
2. Right-click the “FHDRM” drive and select [Open]
3. Double click [SETUP.EXE] in the [pcsw] folder.
4. Select the language and then follow the dialog box prompts.

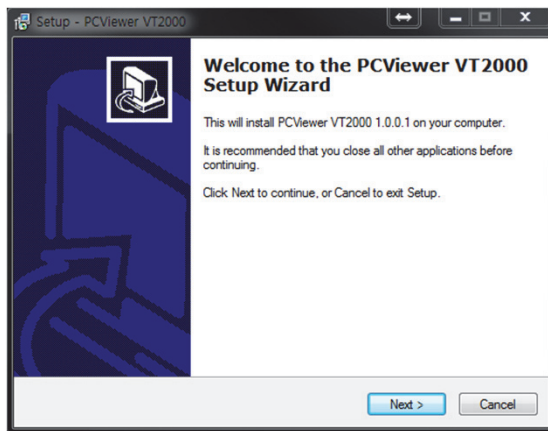

5. The “PC Viewer VT2000” icon will be displayed on your desktop.

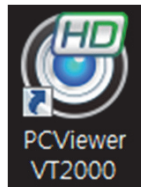

NOTE: To Un-install the PC Viewer Software

Make sure the program is not running and open the 'Control Panel'
Select 'Remove Program' and remove the PC Viewer Software.

PC VIEWER SOFTWARE SETTINGS



Viewing settings

This setting is for the PC Viewer Software itself. To set the Recorder, refer to page 15.

The screenshot shows the 'Settings' dialog box for the PC Viewer Software. It is organized into three main sections:

- Login Password:** A text input field labeled 'Password (1000-9999)' and a 'Set Password' button.
- Viewer Settings:** A group of dropdown menus for 'Language' (set to English), 'Speed Format' (set to mph), 'Speed Type(Play Info Bar)' (set to GPS), 'Time Format' (set to 24HR), 'Date Format' (set to DD/MM/YYYY), and 'Deinterlace' (set to Auto). Below these is a 'Save Layout' button and a 'Last Layout' dropdown menu.
- Drive Data Settings:** A group of text input fields and dropdown menus for 'Max Speed' (set to 100), 'Max G-Sensor' (set to +-1G), and 'Max RPM' (set to 4000).

At the bottom of the dialog are 'OK' and 'Cancel' buttons.

Click the 'Password' button. Password for the PC Viewer Software can be set with any number between 1000-9999.

The 'speed' & 'date' formats will be set automatically according to the PC Windows setting. However it can be changed with this software setting menu.

Last Layout: The program will launch with the same layout as it was when it was closed.

Default Layout: The program will launch with the Default Layout

Drive Data Settings

The graph scales for the Drive Data Window will be modified according to the Settings.


OPEN THE SD CARD

Insert the SD card into your PC



① Click "Select SD Card" icon

② Select the SD card drive and click "OK"

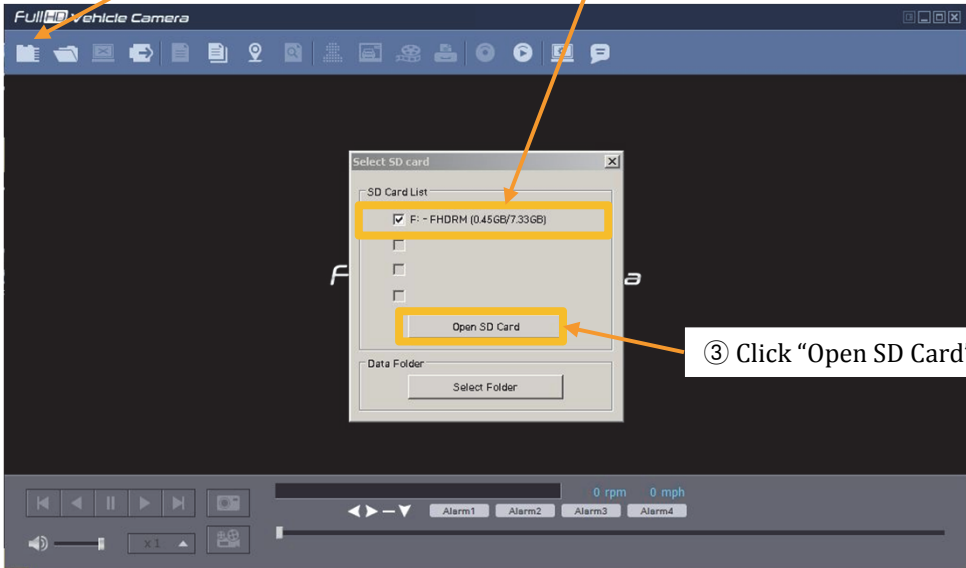

③ Click "Open SD Card"

The playback file list and "Continuous" and "Event" tap is displayed on the right side of the screen.

You can hide the playback list by clicking the close icon.

The playback list can be displayed on the screen again by clicking the "File List" icon.



"Select SD Card" icon


You can end the video playback by clicking the "Close files" icon.



"Close files" icon

Continuous Play next file.

Check events from playback file.

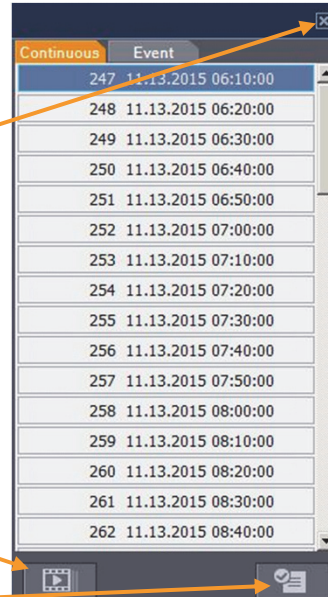


OPEN FILES

If you want to play a specific file that has been backed up on the PC or SD Card, Click the “Open files” icon



“Open files” icon

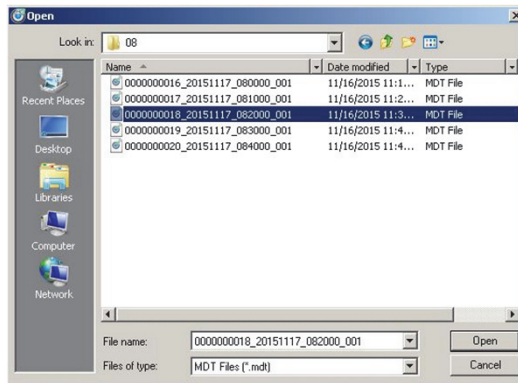


Select the MDT file you want to play and click “Open”.
The image of the selected file will then be displayed and you can click the “Play” button to play the file.



“Eject SD Card” icon


When finished, click “Eject SD Card” icon and remove the SD card from your PC.

Or please use  “Safely Remove Hardware and Eject Media” button in your PC.

PLAYBACK



Vehicle ID, Driver ID

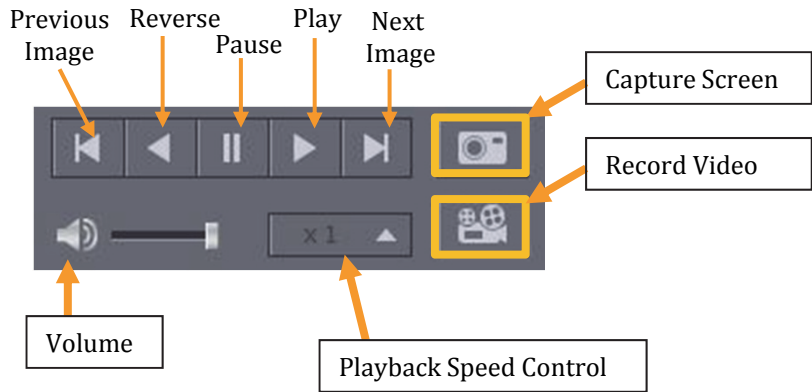

Signal / Alarm Indicator




DRIVE DATA



“Drive Data” icon

The default setting only displays the G-sensor graphs but other information may be added by checking the boxes in the upper part of the screen.

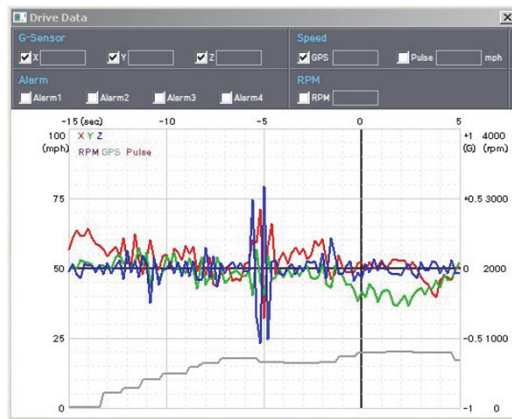

G-Sensor: (X axis: red, Y axis: green, Z axis: blue, based on the positioning of the main unit) is shown with the data reference point zero-point calibrated and positive shocks as (+) and negative shocks as (-).

G sensor X value: Front & Back (like Quick brake or Quick Start)

G sensor Y value: Left & Right (like Quick Turn)

G sensor Z value: Up & Down (like prominence and depression)

Speed: GPS measured speed is displayed in grey.

The speed-pulse measured speed is not support.

RPM: The RPM is not support.

ALARM: The alarms are displayed on the bottom of the screen with the grey bar meaning the trigger is activated.


TRACKING MAP



“Tracking Map” icon

The route taken will be displayed on the Google map.

The playback position will be shown on the map with the orange arrow.

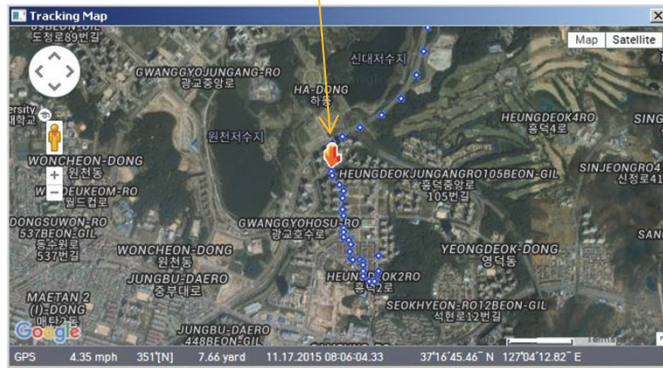

The blue markings show the route taken.

To see the route and position on the Google map, the GPS data should be recorded with video.


To see the map, the PC should be connected to the internet.

PRIVACY SETTINGS



“Privacy Settings” icon

Set the mosaic area on the video for privacy protection.

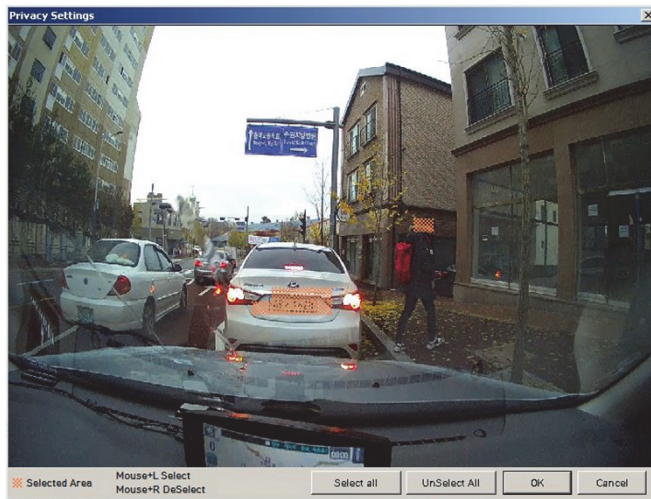

When backing up the data as a JPG or AVI format and playing in the Viewer software, you are able to make a mosaic processing on the area you have set.

To do this, put the pause the video and click the ‘Privacy settings’ button. The privacy setting screen will pop up.

Blur out the area you wish to protect by left-clicking on the sections. You can select multiple areas.

You can also unselect, selected areas by right-clicking the blurred areas.


To select all or clear all, click on the ‘Select all’ or ‘UnSelect All’ buttons on the bottom, respectively.

SAVE JPEG AND AVI FILE

Pause the playback and click “Save JPG” icon to make JPG images.




“Save JPG” icon

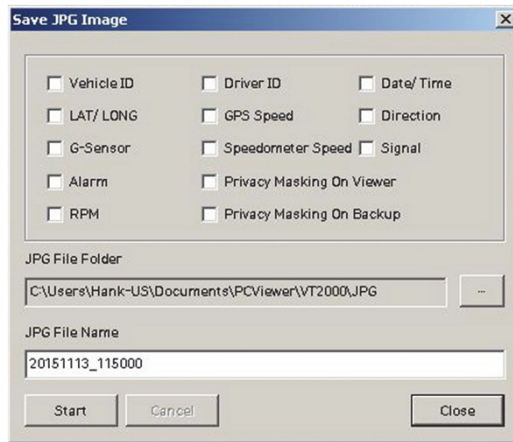

Pause the playback and click “Save AVI” icon to make an AVI file.



“Save AVI” icon

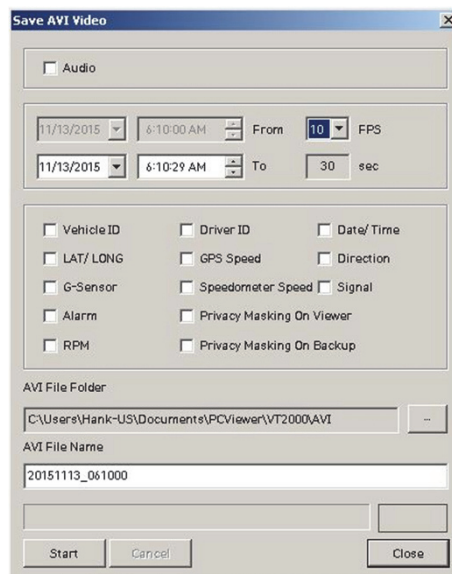


PRINT IMAGE


Pause the playback and click “Print Image” icon.



“Print Image” icon

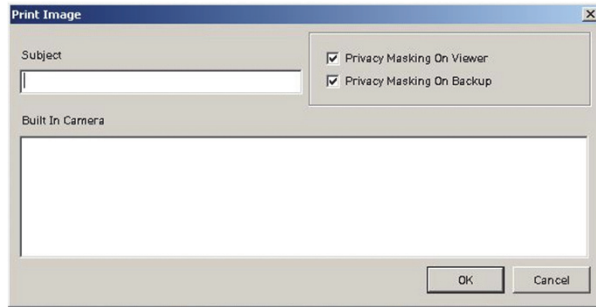

Type Subject and Memo

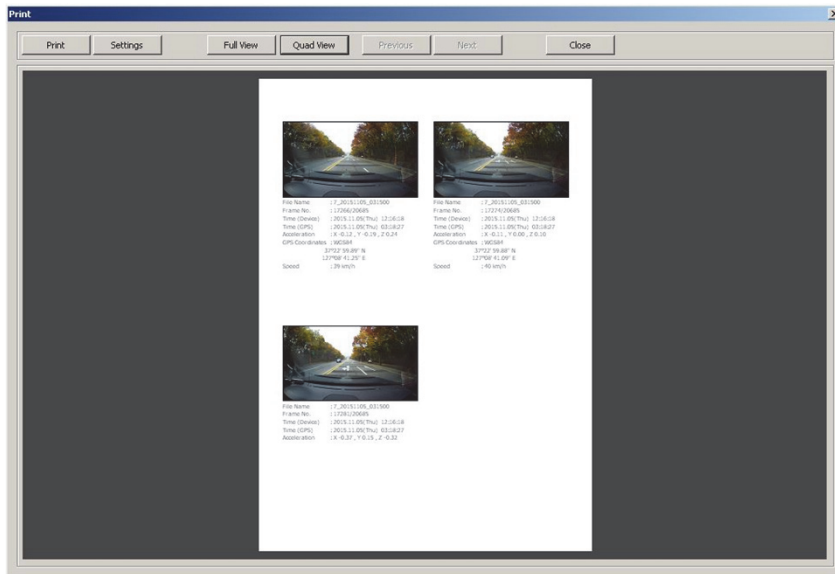

Alter the printer settings to change paper size/orientation etc.

BACKING UP FILES

Back up the recorded data on your PC.

There is an option to store data by type to easy management of data.



“Backup Data” icon

A screenshot of the 'Backup Data' dialog box. The window title is 'Backup Data'. It contains several input fields: 'From' with a date dropdown set to '11/13/2015' and a time dropdown set to '6:10:00 AM'; 'To' with a date dropdown set to '11/13/2015' and a time dropdown set to '6:10:59 AM'; a '60 sec' duration field; 'Vehicle ID' with the text 'VT1000TEST'; 'Driver ID' with the text 'HANK'; 'Memo Title' with an empty text box; and 'Memo' with a large empty text area. Below these is a 'Folder' field with the path 'C:\Users\Hank-US\Documents\PCViewer' and a browse button (...), and a 'Type' dropdown menu. At the bottom are 'Start', 'Cancel', and 'Close' buttons.

The start time is when the video was paused and cannot be changed once you start this process.

Set the time you wish to backup and input Title and Memo.

And input Type and then click [Start].


The maximum amount of time you can backup is one hour.

BACKUP DATA LIST AND EXPORT

You can use the data backup list to play data files easier that have been backed up.



“Backup Data List and Export” icon

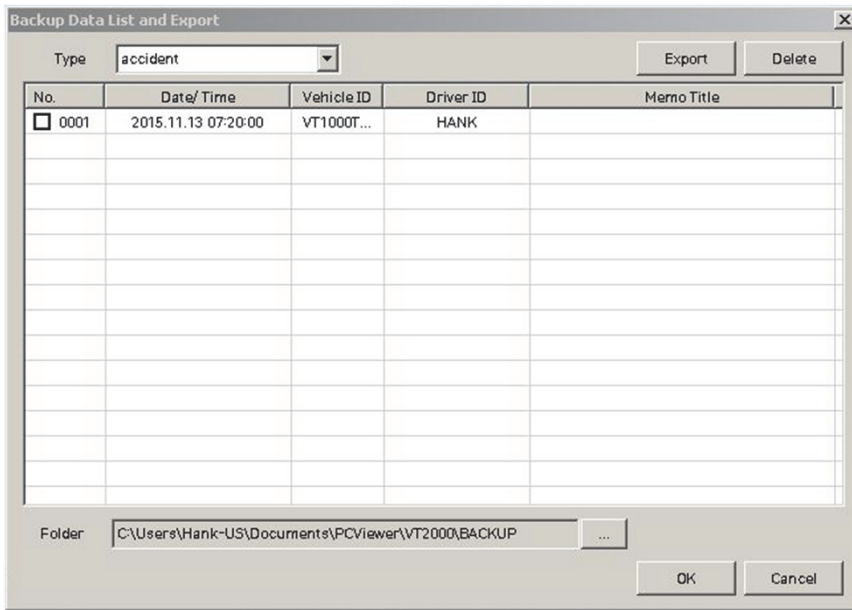

No.	Date/ Time	Vehicle ID	Driver ID	Memo Title
<input type="checkbox"/> 0001	2015.11.13 07:20:00	VT1000T...	HANK	

Choose the folder where the backup files are at the bottom of the screen.
(It will automatically show the last folder that was accessed.)
Then, select the type by scrolling down the options.
The files are listed showing the “Date/Time, Vehicle ID, Driver ID, Memo Title”.
Check the box next to the file you wish to play back and click ‘OK’.

SPECIFICATION

Image sensor	1/3" 3 Megapixel CMOS Sensor
DSP	Standard DSP
Angle of View	170° (H : 139.5°, V : 71.5° ±5%)
Band support	WCDMA Band1(2,100MHz)/ Band8 (900MHz)
Max Data Rate	UL:5.76Mbps, DL : 7.2Mbps
Video resolution	1080p HD (1920x1080) 720P (1280x720), VGA (640x480)
Recording Speed	Up to 30 fps
Recording Mode	Continuous , Event, Dual Mode
Memory	Supports Cards of up to 32GB (Class 10)
GPS/GLONASS	Internal GPS /GLONASS
G-Sensor	Internal 3-axis G-sensor
Gyro	3Axis(X,Y,Z), output rate:100 Hz,
RTC	Internal battery
Speaker	Recording start, error
Audio	Internal Microphone
Alarm In/Out	2 x Alarm In, 1 x Alarm Out
LED	Record,(Blue LED) Communication(Red LED)
Supper Capacitor	Enable recording of last file and shut down
PC software	Supplied
Power input	12V to 24V DC permeant wiring kit Input Voltage: DC 5V, 3A
Delayed Power Shutdown	Supports Delayed Power Shutdown
Power consumption	15W
Size / Weight	91mm X 56mm X 56mm (w/o Bracket) , 150g
Operation Temp.	-10 °C~55 °C

APPENDIX Recording time table

RECORDING TIME TABLE

Resolution	Quality	FPS	32GB	Resolution	Quality	FPS	32GB	
1080p HD (1920x1080)	Standard	15	24 hours	720p (1280x720)	Standard	30	23 hours	
		10	30 hours			15	38 hours	
		5	43 hours			10	49 hours	
		1	64 hours			5	68 hours	
	High	15	20 hours			4	74 hours	
		10	26 hours			3	81 hours	
		5	36 hours			2	89 hours	
		1	55 hours			1	99 hours	
	Super	15	17 hours			High	30	17 hours
		10	22 hours				15	29 hours
		5	31 hours				10	37 hours
		1	47 hours				5	53 hours
VGA (640x480)	Standard	30	61 hours	4	57 hours			
		15	98 hours	3	63 hours			
		10	121 hours	2	70 hours			
		5	161 hours	1	78 hours			
		1	217 hours	30	14 hours			
	High	30	43 hours	15	24 hours			
		15	70 hours	10	30 hours			
		10	88 hours	5	43 hours			
		5	120 hours	4	47 hours			
		1	167 hours	3	51 hours			
	Super	30	33 hours	2	57 hours			
		15	55 hours	1	64 hours			
		10	69 hours					
		5	95 hours					
		1	136 hours					

This table is a guideline only.


Actual results may vary depending on a variety of factors on the road.

APPENDIX (Upgrade)

NOTE: To get the upgrade firmware, please contact your local distributor.

1. Prepare Firmware

Make a folder called [program] on the SD root folder as shown below,

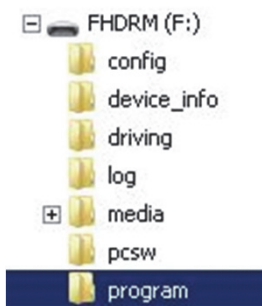

Copy “XXXXXX_x.x.x.img” file to the SD card [program] folder.

2. Upgrade VT2000

Insert the prepared SD card to VT2000 unit and turn on the power.

The Blue & Red LED will blink while the unit is upgrading. It will also ‘beep’ continuously. Upgrading the unit usually takes about 30 seconds.

**Warning: Do not turn off the power during upgrading.
If the upgrade fails, the VT2000 unit should be returned
to your local distributor.**

Once the upgrading is finished, the unit will automatically turn off and on the power.

Technical Support & Warranty

TECHNICAL SUPPORT

For Technical Support, please contact your local distributor.

LIMITED WARRANTY

This product is supplied with 1 year warranty. The Warranty excludes products That have been misused, (including accidental damage) and damage caused by normal wear and tear. In the unlikely event that you encounter a problem with this product, it should be returned to the place of purchase.



<http://www.visiontrack.com>