



THE NEXT GENERATION OF TELEMATICS
AND INTEGRATED CAMERA SOLUTIONS

VT4000

Multi-channel Monitor layout



THE UK'S MOST **AWARD-WINNING CAMERA TELEMATICS COMPANY**



www.visiontrack.com

Monitor layout

The purpose of this guide is to show you how the cameras are to be shown on the monitor and connected to the VisionTrack range of Multi-Channel MDVR's.

Please note the below wiring and view configuration for the VT4000/VT5000/VT5500/VT8000 and VT16000

Channel view layout:

Channel 1 = Left

Channel 2 = Right

Channel 3 = Reverse

Channel 4 = Driver/Load

Channel 5 = Forward facing

Alarm triggers:

Alarm 1 calls Channel 1

Alarm 2 calls Channel 2

Alarm 3 calls Channel 3

Alarm 4 calls Channel 4

Please make sure alarm triggers are tested and the default view is correct.

