


VT2000 Calibration:

1. On start-up, the **GREEN** light will flash and the **BLUE** light will stay solid, once the camera is operational you will hear an audio beep.

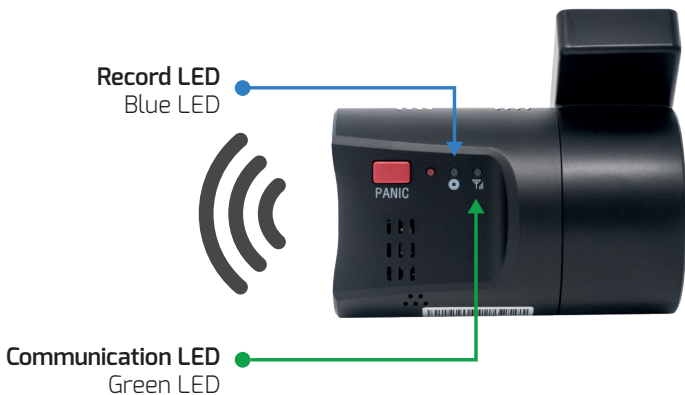

2. Park your vehicle on a flat surface and press and hold calibration button for **5 seconds**, the camera will beep again.

