

VISIONTRACK



VT2.2 INSTALLATION AND CALIBRATION GUIDE

THE UK'S MOST AWARD-WINNING CAMERA TELEMATICS COMPANY



www.visiontrack.com



Overview

The VT.2.2 is an industry-leading, 2-channel connected full-HD vehicle camera, with GPS/GLONASS, G-shock sensor and built-in Wi-Fi (VT.2.2 can connect to your network access point, THIS IS NOT A WIFI HOTSPOT). The super-wide viewing angle provides high-resolution images before, during and after any incident.



The VT.2.2 can be connected to our telematics platform and includes an optional secondary camera offering the ability to monitor and record footage of the driver or passengers.

Key features:

Industry-leading, connected and HD-quality vehicle camera and telematics system			Provides First Notification of Loss (FNOL) alerts
Provides HD images before, during and after an incident			Accurate G-shock sensor measures impact force and driving style
Monitor driver behaviour from anywhere using the VisionTrack IoT platform			Built-in GPS and GLONASS receiver with self-checking notifications



VT2.2 Installation:

- 1 Adjust the bracket up or down by removing the screw first (see below), then adjust the angle depending on the specific angle of your windscreen and tighten the screw to lock.





- 2 Provided is a 3M™ adhesive pad, please attach to the VT2.2 bracket. Once attached, press firmly onto the windscreen. (See page 6 for mounting position)



3 IMPORTANT: Degrease and clean windscreen before attaching.

After the windscreen is clean, secure the VT2.2 behind the rear-view mirror, below the windscreen tint. Place the camera as high on the windscreen as possible, but still within the windscreen wiper area.

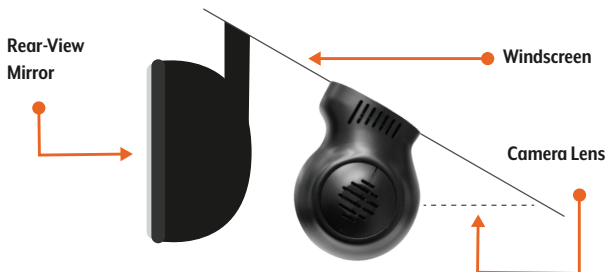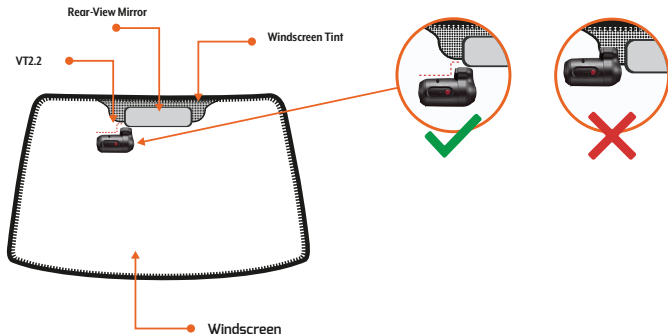


DO NOT APPLY CAMERA TO TINTED WINDSCREEN SURROUND. MUST BE STUCK TO CLEAR GLASS TO AVOID ANY GPS SIGNAL INTERFERENCE.



VT2.2 Calibration:

- 1 On start-up, the **GREEN** light will flash and the **BLUE** light will stay solid, once the camera is operational you will hear an audio beep.

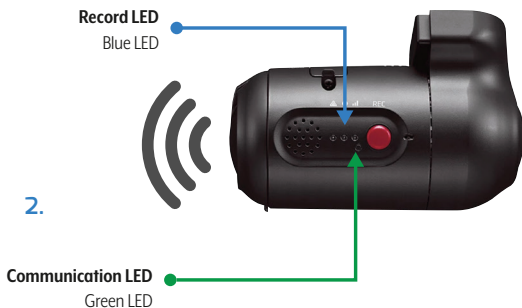

- 2 Park your vehicle on a flat surface and press and hold calibration button for 5 seconds, the camera will beep again.



THE UK'S MOST AWARD-WINNING CAMERA TELEMATICS COMPANY



www.visiontrack.com



VISIONTRACK

powered by  AUTONOMISE.AI

VT2.2 INSTALLATION & CALIBRATION GUIDE

t+44 (0) 1246 225 745 | **s** support.visiontrack.com | **w** visiontrack.com