Please download the config tool from our support site at this location, (you will need to create an account to download the file).
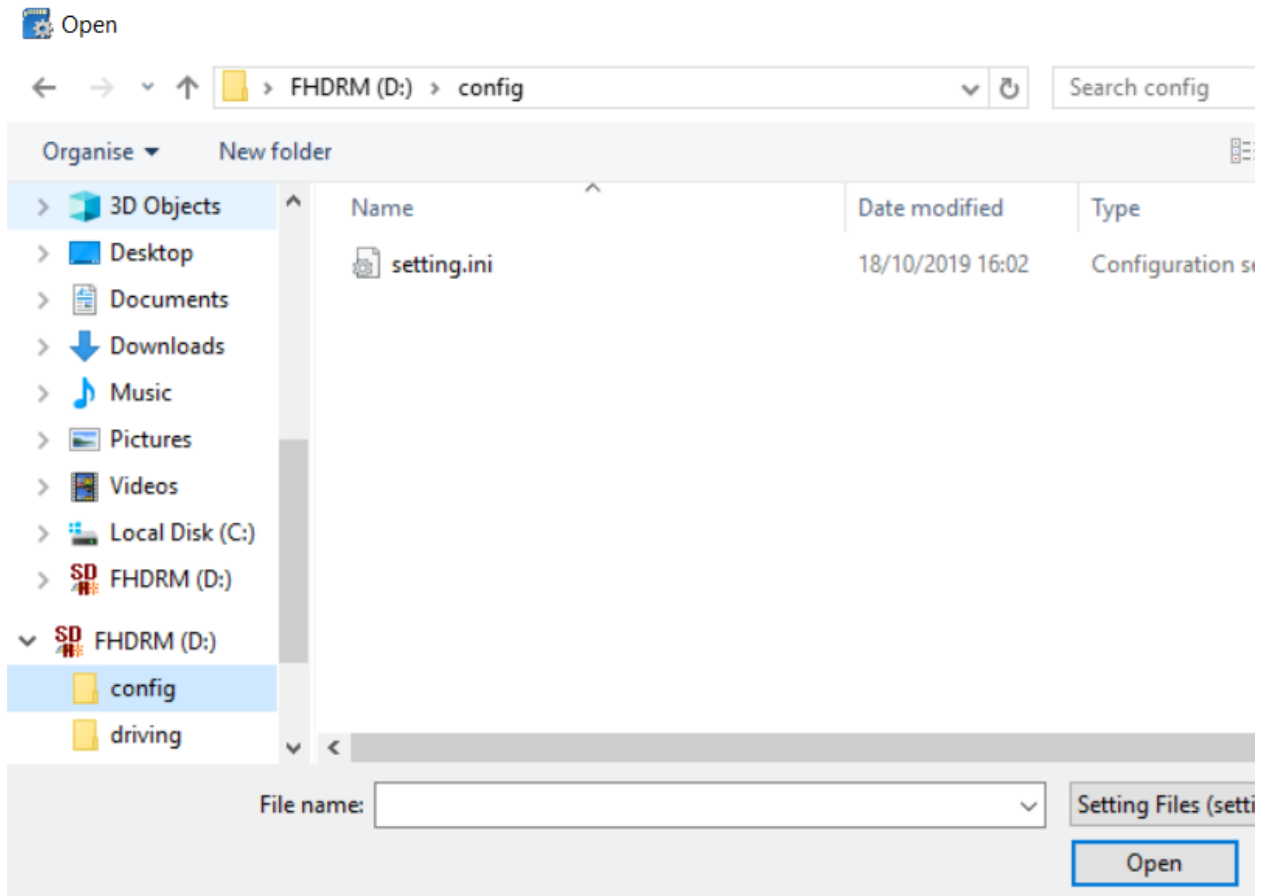
URL: https://support.visiontrack.com

Once downloaded and installed please insert the SD card into your PC.

Click on open
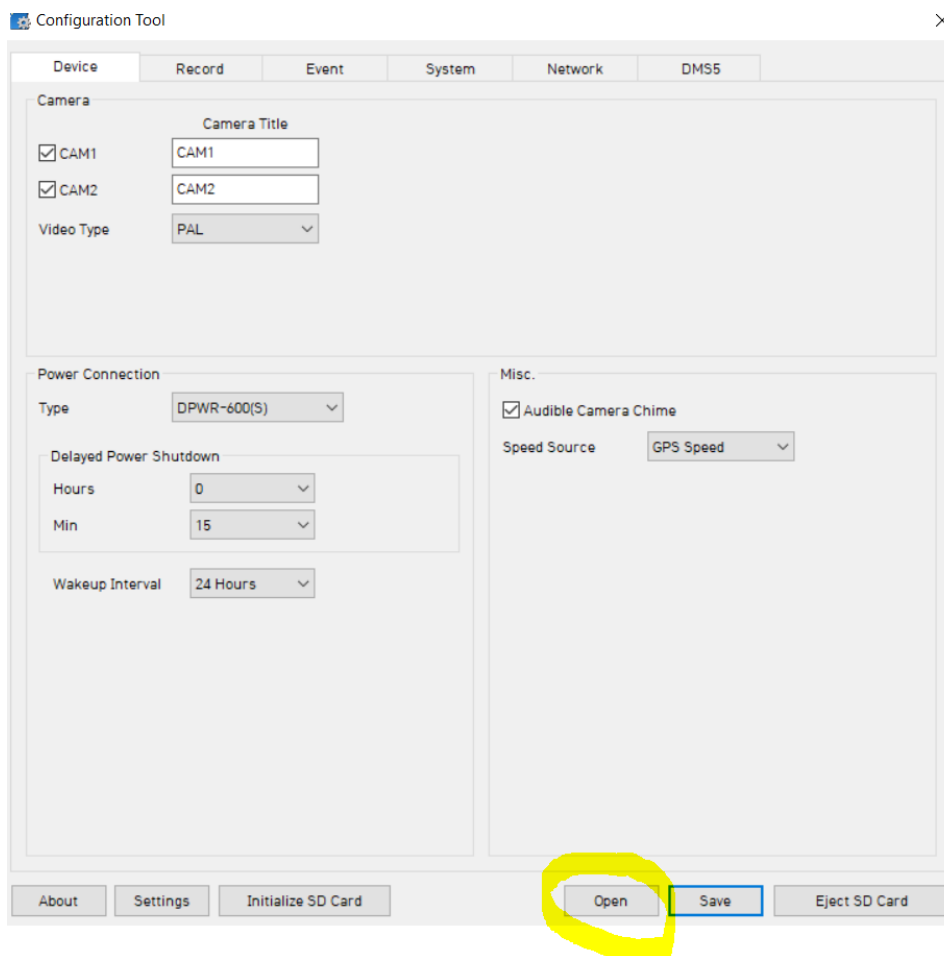
Navigate to SD card FHDRM > Config and select the settings.ini file, select open.

Please note if the file is not there it will be in the Device Folder.

On the device tab please make sure the 2nd camera is ticked.

Device	Record	Event	System	Network	DMS5

Camera

Camera Title

☑ CAM1   CAM1

☑ CAM2   CAM2

Video Type   PAL

Power Connection

Type   DPWR-600(S)

Delayed Power Shutdown

Hours   0

Min   15

Wakeup Interval   24 Hours

Misc.

☑ Audible Camera Chime

Speed Source   GPS Speed

| About | Settings | Initialize SD Card | | Open | Save | Eject SD Card |

On the network tab please make sure the SIM APN is changed to your own SIM details

Device	Record	Event	System	Networ

Network

Mobile Network

☑ Enable

Dial No.	•99#
APN	CC0498.M2M
User ID	
Password	
Authentication	CHAP ⌄
SMS Center Number	

On the last tab please make sure the settings are the same as the below:

Domain IP:

http://vtwebapi-live.cloudapp.net

Lastly please initialise the SD card, click on initialise and select the SD card

Browse for Files or Folders   ✕

Select SD Card Drive

D:\

> ▦ Videos
> ▣ Pictures
> ▆ Local Disk (C:)
> SD FHDRM (D:)
> ▣ DVD RW Drive (E:)
 ◉ CCleaner
 ▦ Configuration Tool KP1
 ▦ Configuration Tool VT2.2
 ▦ Configuration Tool VT2000

<   >

OK   Cancel

eCall   ☐ Alarm1   ☐ Alarm2
] Transmit Image   ☑ Transmit Image   ☑ Transmit Image

Overspeed
] Transmit Image

Initialize SD Card   Open
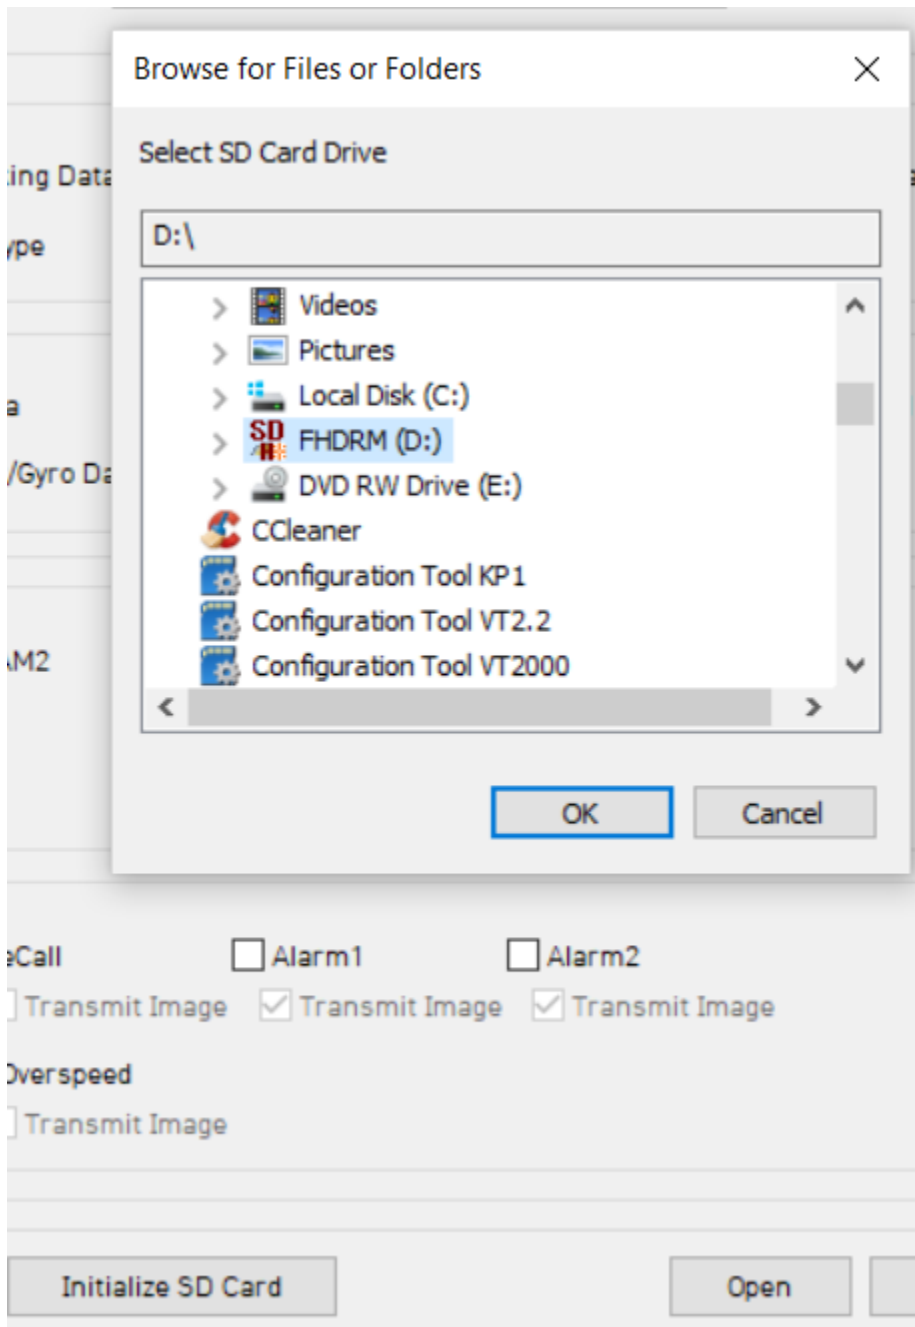
Remove the tick from Keep current config and tick Do not copy config files and click start.

Initialize SD Card   ✕

Drive : D

File System : FAT32

☑ Quick Format

☐ Keep current configuration files
☑ Do not copy configuration files

| Start | Cancel | Close |
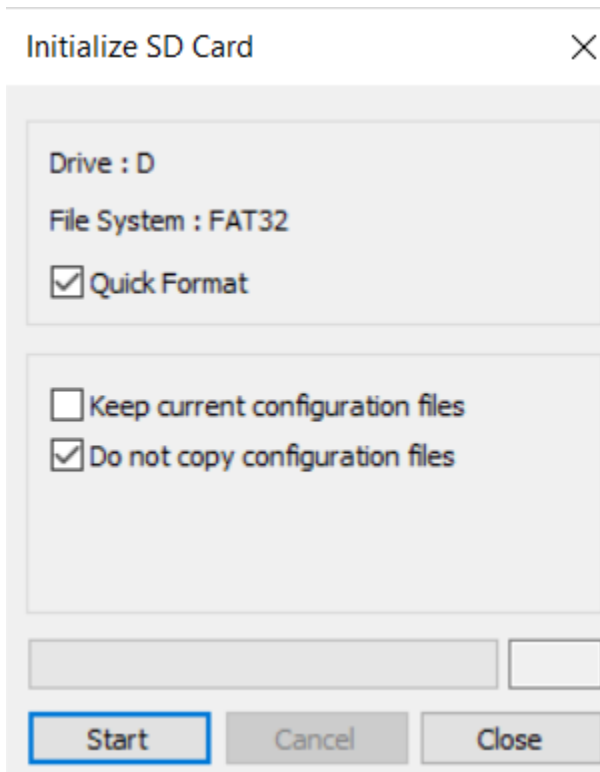
Once complete please click ok to the pop up message

Configuration Tool   ✕

SD Card Initialized.

OK
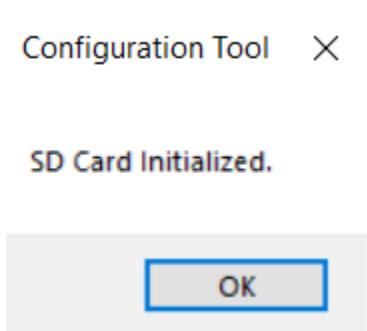
Finally click on save and select the SD card as shown

Select Media To Save

D: FHDRM (30.15GB/30.15GB)

Data Folder

Select Folder
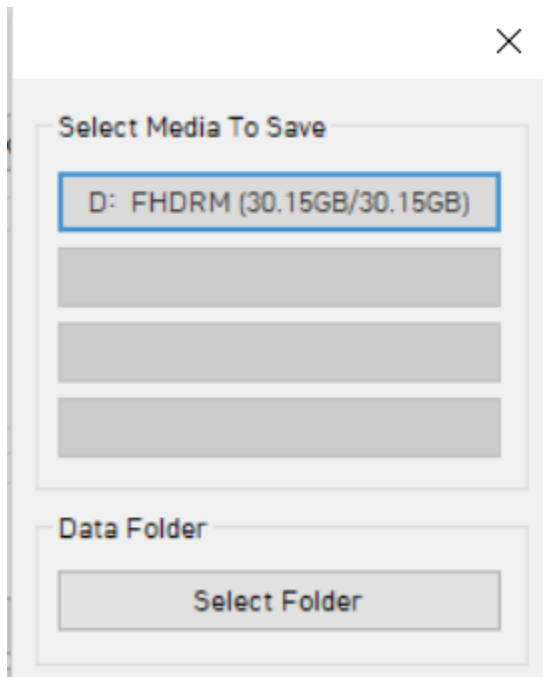
Click ok to the message and then eject the SD card.

Configuration Tool   ✕

「Save Settings File」Completed.

OK